

Instruction

1. Please study this instruction sheet before charging.
2. Connect the charger with the adaptor.
3. Attach the adaptor into the AC outlet. The LED flashes in red once. (The corresponding LED indicator of the 9V slot doesn't light).
4. Charge AA/AAA/C/D batteries
 - Insert AA/AAA/C/D batteries into the charger for 1 minute. If the battery is not suitable for recharge, the LED indicator flashes in red.
 - If the battery is suitable for charging, fast charging mode commences. The LED indicator lights in red.
 - When battery is full or the predetermined charging time (3 hours, which is controlled by the safety timer function) is over, the charger will switch to trickle charge mode. The LED indicator lights in green.
5. Charge 9V battery
 - Insert 9V battery into the charger. The LED indicator lights in red. The LED still lights in red when the charging process is completed.
6. Disconnect the charger from AC outlet when the battery is full or the unit is not in use.
7. Remove the batteries from the charger.
8. It is recommended to charge batteries of same capacity in each charging process.

Warning:

1. For indoor use only.
2. Do not charge non-rechargeable batteries.
3. The appliance is not intended for use by children without supervision.
4. The battery should be disposed of safely.
5. Batteries should not be thrown into household waste, open fire or waters.

Technical Specification:

Input Voltage: 100-240V AC ~60/50Hz

Output: 11.4VA (max.)