

Note: This is for when the RS485/Meter port on the inverter is occupied or unavailable

To Inverter BMS Port

