

Bluetooth App Instructions (IOS)

Qingdao Skywise Technology Co., Ltd.
NO.192, Zhuzhou Road, Qingdao
website: www.lumiax.com

Catalog

1. User manual for IOS	2
1.1 Installing	2
1.2 Connection	2
1.3 Home Page	2
2. Real Time Monitoring.....	3
2.1 PV	3
2.2 Battery	4
2.3 Load	5
3. Parameters Setting	6
3.1 Device param	6
3.2 Battery param.....	6
3.3 Load param	8
4. Other Actions	11
4.1 Device Password.....	11
4.2 Other operations.....	11

1. User manual for IOS



1.1 Installing

Search the apple store for 'solarlife' and install it.




1.2 Connection

For choosing Bluetooth communication, please select the corresponding device. After successful matching, device name will show up on the top of the phone screen.

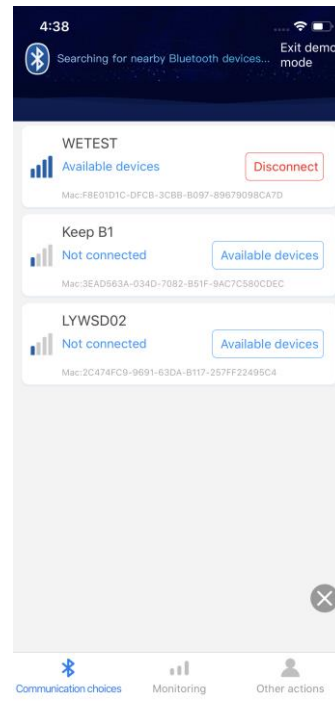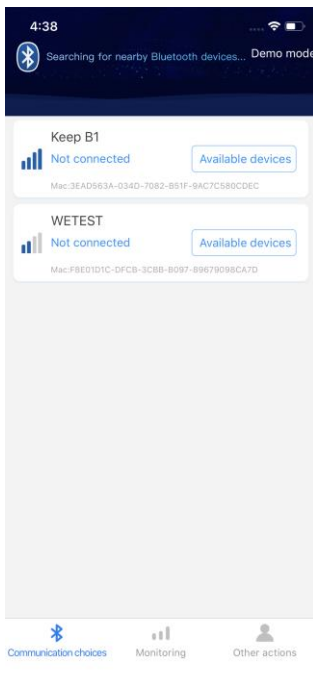

1.3 Home Page


After successful device connection you will be automatically transferred to below displayed page. The device's name is shown in '**Communication choices**'. '**Monitoring**' can access all kinds parameters of current PV, load and battery.

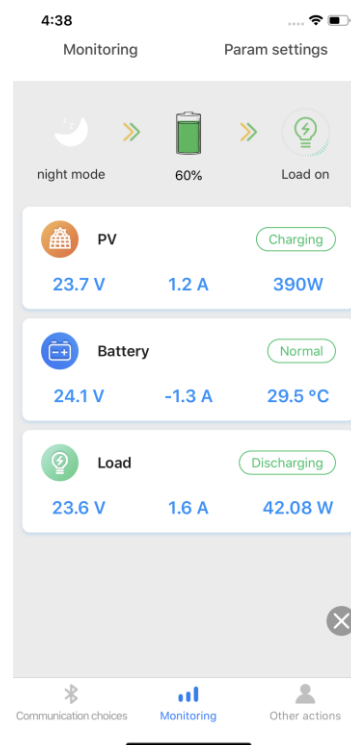


2. Real Time Monitoring

2.1 PV

Step 1: On this page, you can visualize the PV working mode(Night or Daytime), charging status, as well as the parameters of current, voltage and power. You can pull down to update.

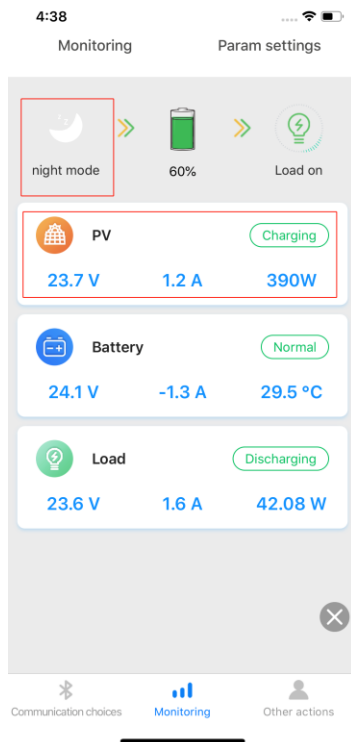

Step 2: Click '**PV**', to access the page of PV details. On this page you can read PV voltage, PV current, PV power, charging energy today, total charging energy as well as energy generated graphs of 60 days.

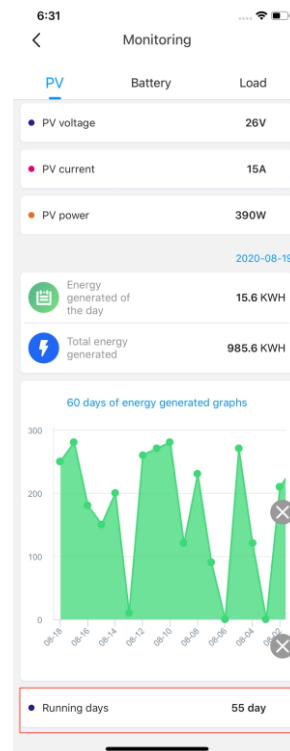


Step 3: Click '**Running days**' to retrieve daily power information (in Wh).


Device time	Energy generated of the day(wh)
2020-08-18	250wh
2020-08-17	110wh
2020-08-16	210wh
2020-08-15	230wh
2020-08-14	180wh
2020-08-13	30wh
2020-08-12	250wh
2020-08-11	290wh
2020-08-10	60wh
2020-08-09	180wh
2020-08-08	120wh
2020-08-07	290wh
2020-08-06	50wh
2020-08-05	90wh
2020-08-04	120wh
2020-08-03	240wh
2020-08-02	100wh
2020-08-01	40wh
2020-07-31	200wh

2.2 Battery


Step 1: This will display the battery's capacity, voltage and current as well as temperature.

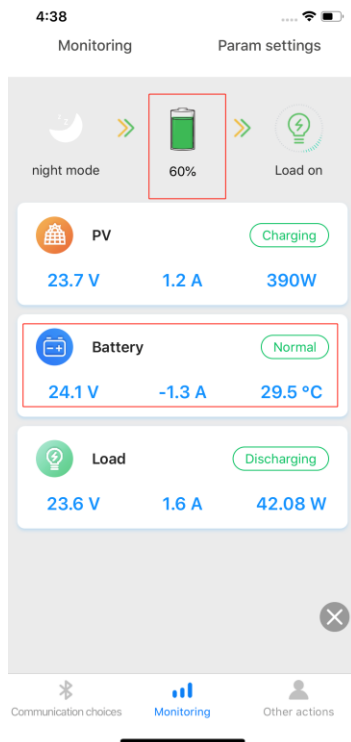

Step 2: Click '**Battery**' to check highest and lowest historical voltage graphs of 60 days.

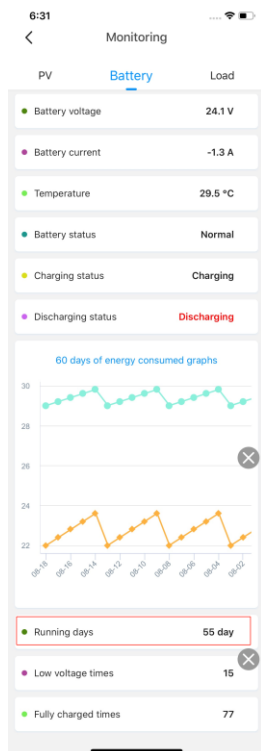

Step 3: Should there be problems with indications on PV, battery or load, an alarm message will be presented red color on '**Battery status**'

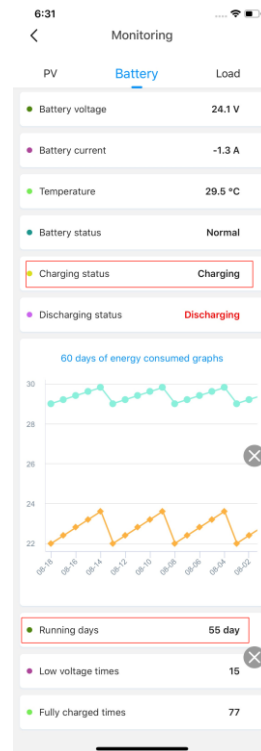

Step 4: Click '**Running days**' to access the date and corresponding data.


4:39

历史记录

date	Minimum voltage	maximum
2020-08-18	29.0V	22.0V
2020-08-17	29.2V	22.4V
2020-08-16	29.4V	22.8V
2020-08-15	29.6V	23.2V
2020-08-14	29.8V	23.6V
2020-08-13	29.0V	22.0V
2020-08-12	29.2V	22.4V
2020-08-11	29.4V	22.8V
2020-08-10	29.6V	23.2V
2020-08-09	29.8V	23.6V
2020-08-08	29.0V	22.0V
2020-08-07	29.2V	22.4V
2020-08-06	29.4V	22.8V
2020-08-05	29.6V	23.2V
2020-08-04	29.8V	23.6V
2020-08-03	29.0V	22.0V
2020-08-02	29.2V	22.4V
2020-08-01	29.4V	22.8V
2020-07-31	29.6V	23.2V
2020-07-30	29.8V	23.6V
2020-07-29	29.0V	22.0V
2020-07-28	29.2V	22.4V
2020-07-27	29.4V	22.8V
2020-07-26	29.6V	23.2V
2020-07-25	29.8V	23.6V
2020-07-24	29.0V	22.0V
2020-07-23	29.2V	22.4V
2020-07-22	29.4V	22.8V
2020-07-21	29.6V	23.2V
2020-07-20	29.8V	23.6V
2020-07-19	29.0V	22.0V
2020-07-18	29.2V	22.4V
2020-07-17	29.4V	22.8V
2020-07-16	29.6V	23.2V
2020-07-15	29.8V	23.6V
2020-07-14	29.0V	22.0V
2020-07-13	29.2V	22.4V
2020-07-12	29.4V	22.8V
2020-07-11	29.6V	23.2V
2020-07-10	29.8V	23.6V
2020-07-09	29.0V	22.0V
2020-07-08	29.2V	22.4V
2020-07-07	29.4V	22.8V
2020-07-06	29.6V	23.2V
2020-07-05	29.8V	23.6V
2020-07-04	29.0V	22.0V
2020-07-03	29.2V	22.4V
2020-07-02	29.4V	22.8V
2020-07-01	29.6V	23.2V
2020-06-30	29.8V	23.6V
2020-06-29	29.0V	22.0V
2020-06-28	29.2V	22.4V
2020-06-27	29.4V	22.8V
2020-06-26	29.6V	23.2V
2020-06-25	29.8V	23.6V
2020-06-24	29.0V	22.0V
2020-06-23	29.2V	22.4V
2020-06-22	29.4V	22.8V
2020-06-21	29.6V	23.2V
2020-06-20	29.8V	23.6V
2020-06-19	29.0V	22.0V
2020-06-18	29.2V	22.4V
2020-06-17	29.4V	22.8V
2020-06-16	29.6V	23.2V
2020-06-15	29.8V	23.6V
2020-06-14	29.0V	22.0V
2020-06-13	29.2V	22.4V
2020-06-12	29.4V	22.8V
2020-06-11	29.6V	23.2V
2020-06-10	29.8V	23.6V
2020-06-09	29.0V	22.0V
2020-06-08	29.2V	22.4V
2020-06-07	29.4V	22.8V
2020-06-06	29.6V	23.2V
2020-06-05	29.8V	23.6V
2020-06-04	29.0V	22.0V
2020-06-03	29.2V	22.4V
2020-06-02	29.4V	22.8V
2020-06-01	29.6V	23.2V
2020-05-31	29.8V	23.6V
2020-05-30	29.0V	22.0V
2020-05-29	29.2V	22.4V
2020-05-28	29.4V	22.8V
2020-05-27	29.6V	23.2V
2020-05-26	29.8V	23.6V
2020-05-25	29.0V	22.0V
2020-05-24	29.2V	22.4V
2020-05-23	29.4V	22.8V
2020-05-22	29.6V	23.2V
2020-05-21	29.8V	23.6V
2020-05-20	29.0V	22.0V
2020-05-19	29.2V	22.4V
2020-05-18	29.4V	22.8V
2020-05-17	29.6V	23.2V
2020-05-16	29.8V	23.6V
2020-05-15	29.0V	22.0V
2020-05-14	29.2V	22.4V
2020-05-13	29.4V	22.8V
2020-05-12	29.6V	23.2V
2020-05-11	29.8V	23.6V
2020-05-10	29.0V	22.0V
2020-05-09	29.2V	22.4V
2020-05-08	29.4V	22.8V
2020-05-07	29.6V	23.2V
2020-05-06	29.8V	23.6V
2020-05-05	29.0V	22.0V
2020-05-04	29.2V	22.4V
2020-05-03	29.4V	22.8V
2020-05-02	29.6V	23.2V
2020-05-01	29.8V	23.6V
2020-04-30	29.0V	22.0V
2020-04-29	29.2V	22.4V
2020-04-28	29.4V	22.8V
2020-04-27	29.6V	23.2V
2020-04-26	29.8V	23.6V
2020-04-25	29.0V	22.0V
2020-04-24	29.2V	22.4V
2020-04-23	29.4V	22.8V
2020-04-22	29.6V	23.2V
2020-04-21	29.8V	23.6V
2020-04-20	29.0V	22.0V
2020-04-19	29.2V	22.4V
2020-04-18	29.4V	22.8V
2020-04-17	29.6V	23.2V
2020-04-16	29.8V	23.6V
2020-04-15	29.0V	22.0V
2020-04-14	29.2V	22.4V
2020-04-13	29.4V	22.8V
2020-04-12	29.6V	23.2V
2020-04-11	29.8V	23.6V
2020-04-10	29.0V	22.0V
2020-04-09	29.2V	22.4V
2020-04-08	29.4V	22.8V
2020-04-07	29.6V	23.2V
2020-04-06	29.8V	23.6V
2020-04-05	29.0V	22.0V
2020-04-04	29.2V	22.4V
2020-04-03	29.4V	22.8V
2020-04-02	29.6V	23.2V
2020-04-01	29.8V	23.6V
2020-03-31	29.0V	22.0V
2020-03-30	29.2V	22.4V
2020-03-29	29.4V	22.8V
2020-03-28	29.6V	23.2V
2020-03-27	29.8V	23.6V
2020-03-26	29.0V	22.0V
2020-03-25	29.2V	22.4V
2020-03-24	29.4V	22.8V
2020-03-23	29.6V	23.2V
2020-03-22	29.8V	23.6V
2020-03-21	29.0V	22.0V
2020-03-20	29.2V	22.4V
2020-03-19	29.4V	22.8V
2020-03-18	29.6V	23.2V
2020-03-17	29.8V	23.6V
2020-03-16	29.0V	22.0V
2020-03-15	29.2V	22.4V
2020-03-14	29.4V	22.8V
2020-03-13	29.6V	23.2V
2020-03-12	29.8V	23.6V
2020-03-11	29.0V	22.0V
2020-03-10	29.2V	22.4V
2020-03-09	29.4V	22.8V
2020-03-08	29.6V	23.2V
2020-03-07	29.8V	23.6V
2020-03-06	29.0V	22.0V
2020-03-05	29.2V	22.4V
2020-03-04	29.4V	22.8V
2020-03-03	29.6V	23.2V
2020-03-02	29.8V	23.6V
2020-03-01	29.0V	22.0V
2020-02-29	29.2V	22.4V
2020-02-28	29.4V	22.8V
2020-02-27	29.6V	23.2V
2020-02-26	29.8V	23.6V
2020-02-25	29.0V	22.0V
2020-02-24	29.2V	22.4V
2020-02-23	29.4V	22.8V
2020-02-22	29.6V	23.2V
2020-02-21	29.8V	23.6V
2020-02-20	29.0V	22.0V
2020-02-19	29.2V	22.4V
2020-02-18	29.4V	22.8V
2020-02-17	29.6V	23.2V
2020-02-16	29.8V	23.6V
2020-02-15	29.0V	22.0V
2020-02-14	29.2V	22.4V
2020-02-13	29.4V	22.8V
2020-02-12	29.6V	23.2V
2020-02-11	29.8V	23.6V
2020-02-10	29.0V	22.0V
2020-02-09	29.2V	22.4V
2020-02-08	29.4V	22.8V
2020-02-07	29.6V	23.2V
2020-02-06	29.8V	23.6V
2020-02-05	29.0V	22.0V
2020-02-04	29.2V	22.4V
2020-02-03	29.4V	22.8V
2020-02-02	29.6V	23.2V
2020-02-01	29.8V	23.6V
2020-01-31	29.0V	22.0V
2020-01-30	29.2V	22.4V
2020-01-29	29.4V	22.8V
2020-01-28	29.6V	23.2V
2020-01-27	29.8V	23.6V
2020-01-26	29.0V	22.0V
2020-01-25	29.2V	22.4V
2020-01-24	29.4V	22.8V
2020-01-23	29.6V	23.2V
2020-01-22	29.8V	23.6V
2020-01-21	29.0V	22.0V
2020-01-20	29.2V	22.4V
2020-01-19	29.4V	22.8V
2020-01-18	29.6V	23.2V
2020-01-17	29.8V	23.6V
2020-01-16	29.0V	22.0V
2020-01-15	29.2V	22.4V
2020-01-14	29.4V	22.8V
2020-01-13	29.6V	23.2V
2020-01-12	29.8V	23.6V
2020-01-11	29.0V	22.0V
2020-01-10	29.2V	22.4V
2020-01-09	29.4V	22.8V
2020-01-08	29.6V	23.2V
2020-01-07	29.8V	23.6V
2020-01-06	29.0V	22.0V
2020-01-05	29.2V	22.4V
2020-01-04	29.4V	22.8V
2020-01-03	29.6V	23.2V
2020-01-02	29.8V	23.6V
2020-01-01	29.0V	22.0V

2.3 Load

Step 1: In the Monitoring page, the load symbol lights up to confirm that the load is connected. Should this symbol be dark, than Load is disconnected. The load discharge status, as well as the load voltage, current and power are all presented.

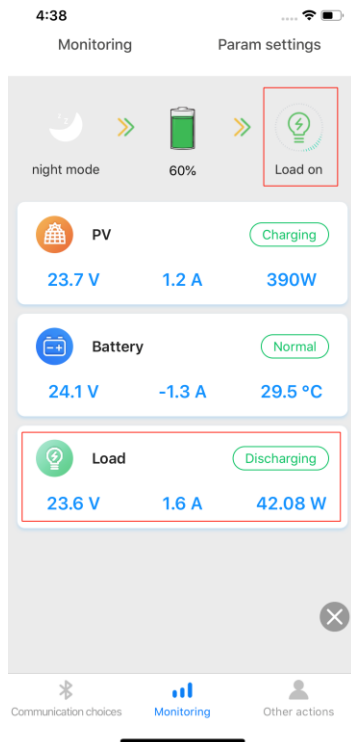

Step 2: Click '**Load**', transfer to the details page of load. Showing energy consumed graphs of 60 days.



Step 3: Click '**Running days**' to check the power and the corresponding data.


4:39 历史记录

Device time	Energy consumed of the day(wh)
2020-08-18	140wh
2020-08-17	160wh
2020-08-16	140wh
2020-08-15	130wh
2020-08-14	240wh
2020-08-13	180wh
2020-08-12	270wh
2020-08-11	200wh
2020-08-10	270wh
2020-08-09	270wh
2020-08-08	190wh
2020-08-07	190wh
2020-08-06	20wh
2020-08-05	110wh
2020-08-04	180wh
2020-08-03	230wh
2020-08-02	220wh
2020-08-01	160wh
2020-07-31	20wh


3. Parameters Setting

3.1 Device param

Step 1: Click '**Param settings**' to enter setting page.

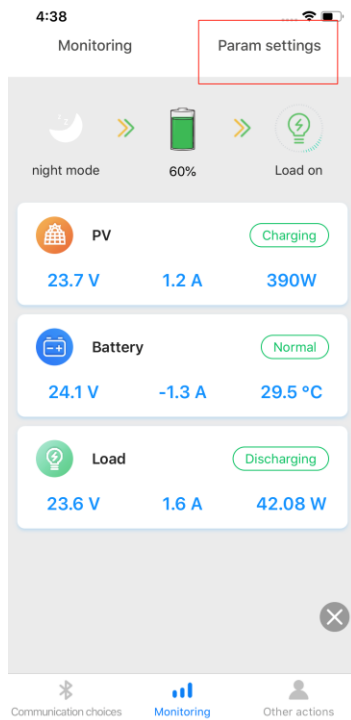


Step 2: Enter Device Parameters page and the current device parameters information will be displayed in 'Read'.

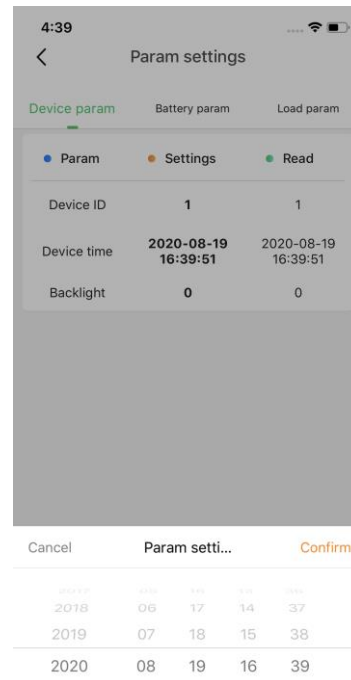


3.2 Battery param



Step 1: Click on the '**Battery param**' and the current battery parameter information will be displayed in 'Read'.

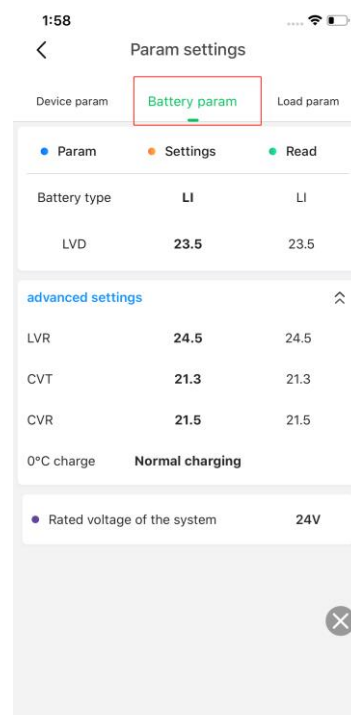

Step 2: The battery type includes lithium, Liquid, GEL and AGM battery. Click on the settings to change.

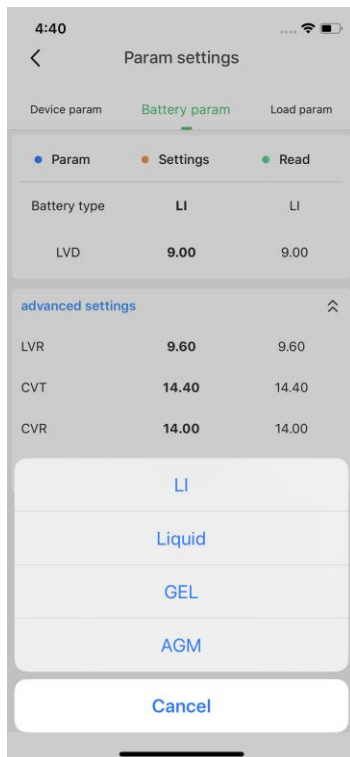


Step 3: You can set the Low Voltage Disconnect(LVD) by click on the settings.

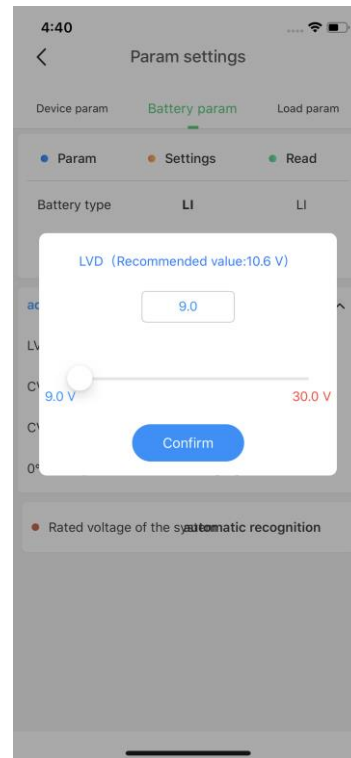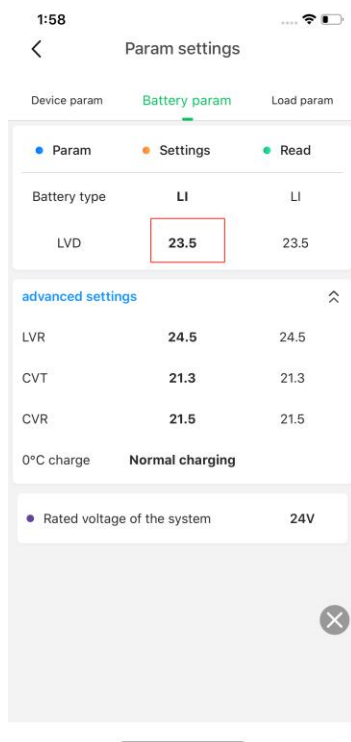



Step 4: Relationship between rated voltage level and real voltage: When the rated voltage level is auto-identified, the real voltage indicated will be a value in the range of the current equipment level. When the identified level is 12Vdc, the effective real voltage indicated will be a value in the range of 12Vdc. When the identified voltage level is 24Vdc, the effective real voltage indicated will be a value in the range of twice of 12Vdc. (The corresponding Day/Night threshold voltage will also be twice of that used for 12Vdc).

3.3 Load param


Step 1: Enter the '**Param settings**' page, and click on the '**Load param**'. The load parameter information will be displayed.

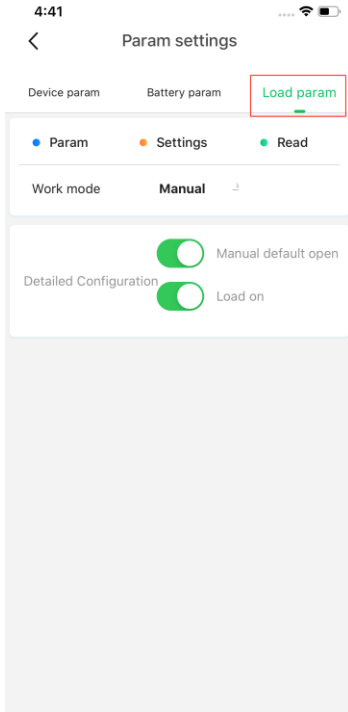


Step 2: Click '**work mode**' to select the working mode (the option is determined by the actual device).

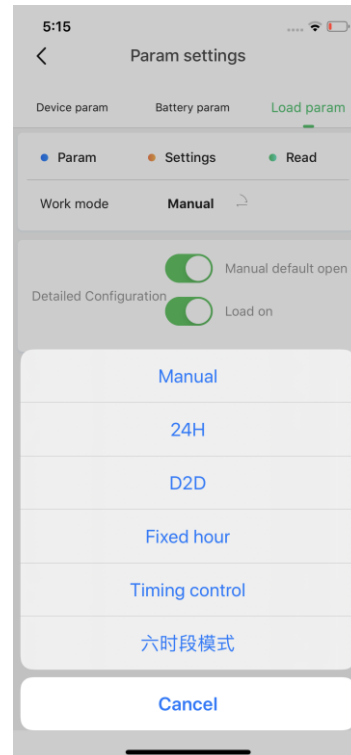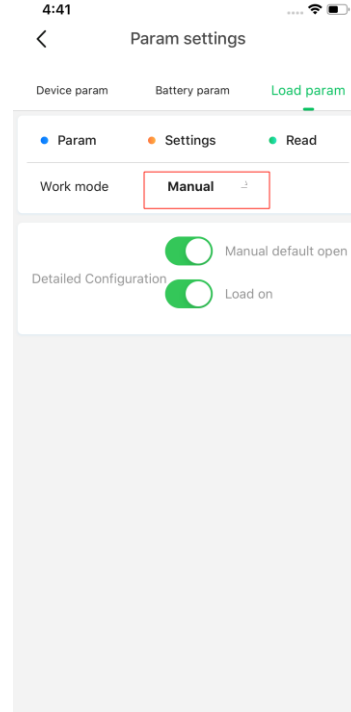


Step 4: Load mode - **manual mode**.
'Manual default ON', when the device is turned on, the load is open.
'Manual default OFF', when the device is turned on, the load is close.
 The second soft key can open the load manually (by clicking on it).


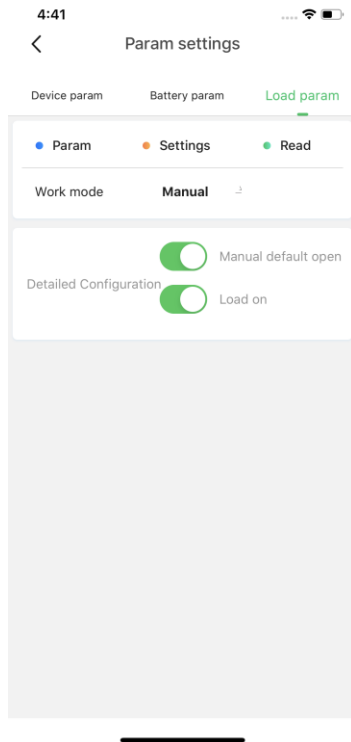


Step 5: Work mode - **24H**, the load is always on mode.

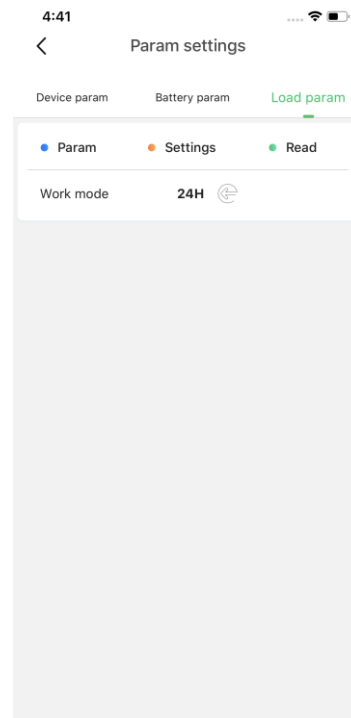


Step 6: Work mode - **D2D** (Dusk to Dawn, mostly for use with solar street lamps), slide to setup D/N voltage, D/N delay range is 0-30Min.

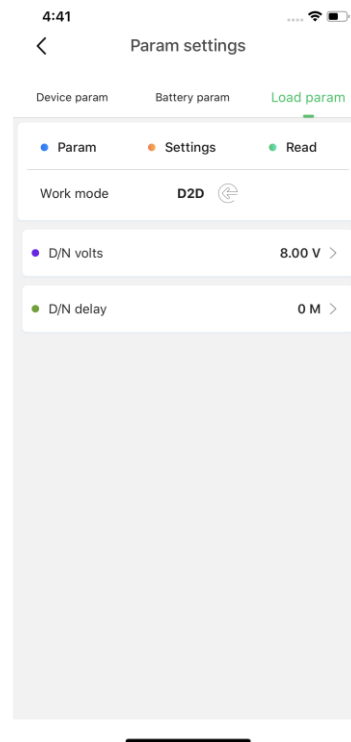

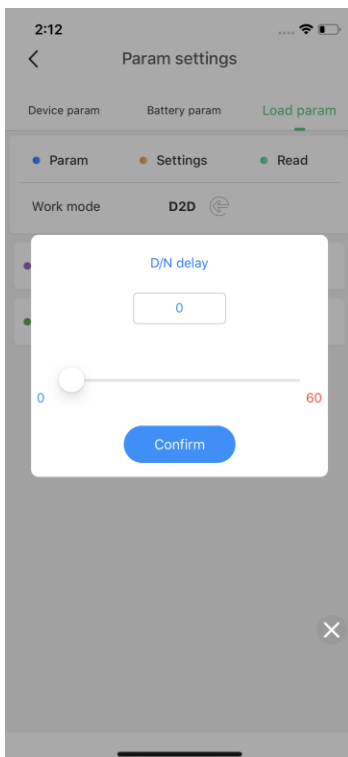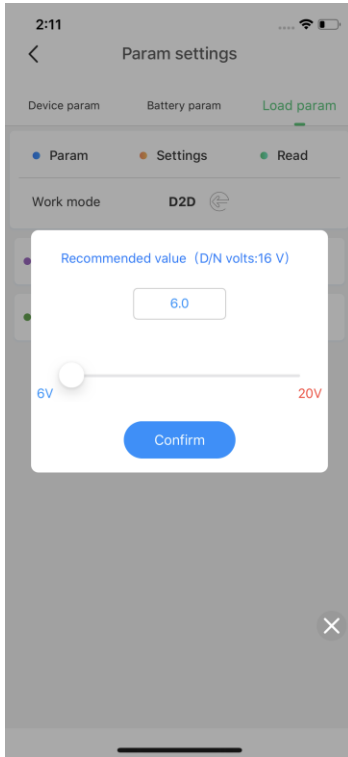

Step 7: Work Mode - ***Fixed lighting hours.***
The light on time, Day/Night Threshold voltage and Day/Night delay time can be set.

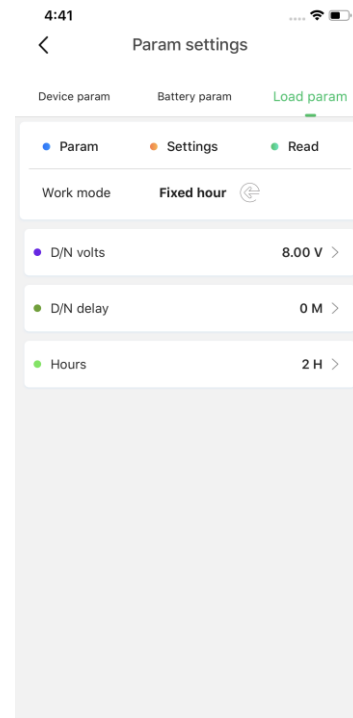


4. Other Actions

4.1 Device Password

Click on the "device password" to set a password for the device.

Note: After setting the password, when entering the App for sending a first time instructions, a password will be required.

Password format: 4 digits

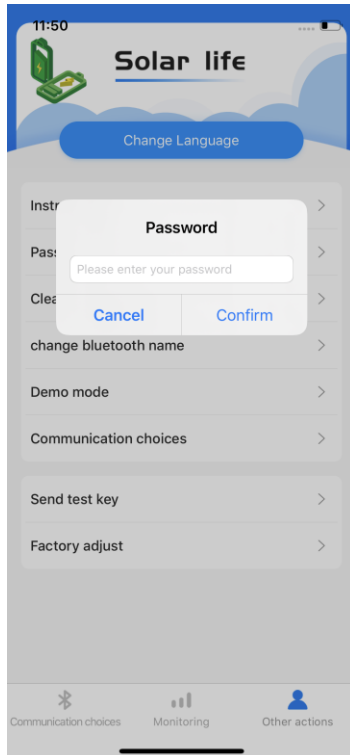

4.2 Other operations

You can send test button, clear historical data, parameters recovery to factory default and so on. When sending out data through App for a first time will require that a password must be entered first.

