



UEB-3 Standard Adaptor Plugs

For 3V Camera devices			
Image	Connector	BRAND	Fit Camcorder or Digital Camera
	G1	SAMSUNG	DIGIMAX-200, DIGIMAX-35 MP3
	Z1/Z3	CANON	PowerShot A100, PowerShot A200, PowerShot A300, PowerShot A310, PowerShot A410, PowerShot A430, PowerShot A460, PowerShot A510, PowerShot A520, PowerShot A530, PowerShot A540, PowerShot A550, PowerShot A560, PowerShot A570 IS, PowerShot A700, PowerShot A710 IS, PowerShot A400, PowerShot A420
		OLYMPUS	Brio D-100, Brio D-150, C-1, C-2, C-40Z, D-40Z, C-220, D-230, SP-320, D-395, D-580 ZOOM, D-575 ZOOM, D-565 ZOOM, D-560 ZOOM, D-545 ZOOM, D-540 ZOOM, D-535 ZOOM, D-520 ZOOM, D-150 ZOOM, C-480 ZOOM, C-460 ZOOM, C-450 ZOOM, C-370 ZOOM, C-360 ZOOM, C-350 ZOOM, C-310 ZOOM, C-2 ZOOM, C-1 ZOOM, C-21T.commu, C-21, X-550, X-450, X-350, X-250, X-200
		SANYO	VPC-MZ1, DSC-AZ1, DSC-G250, DSC-MZ1, DSC-MZ2



For 5V devices

Image	Connector	BRAND	Fit Camcorder or Digital Camera
-------	-----------	-------	---------------------------------

For Digital Camera



	E2	HP	PhotoSmart C500, PhotoSmart C500xi
		KODAK	DC-4800Z
		PENTAX	OPTIO 330, OPTIO 430
		RICOH	CAPLIO RR1, DC-4U, RDC-1700, RDC-6000, RDC-7, RDC-7S, RDC-SPECIAL, Caplio RDC-i500, Caplio RR10, RDC-5000, DC-4T, DC-4, DC-3Z, DC-3, DC-2S RDC-2, RDC-4200, RDC-4300, RDC-200G, RDC-5300
	Z1/Z3	CANON	PowerShot A10, PowerShot A20, PowerShot A40, PowerShot A60, PowerShot A610, PowerShot A620, PowerShot A630, PowerShot A640, PowerShot A70, PowerShot A75, PowerShot A80, PowerShot A85, PowerShot A95, PowerShot A30, PowerShot S100, PowerShot S110, PowerShot S200, PowerShot S230, PowerShot S300, PowerShot S330, PowerShot S400, PowerShot S410, PowerShot S500, Digital IXUS 500, Digital IXUS 430, iVIX HF100
		CASIO	Exilim EX-Z30
		CONTAX	U4R, I4R, SL300RT, DX010242
		FUJIFILM	CLIP IT DS-10/10S, CLIP IT, CLIP IT DS-20, CLIP IT DS-30, CLIP IT 80, DS-220, DS-260HD, DS-300, DS-560, DS-565, DX-7, DX-9, DX-10, FinePix 1200, FinePix 1300, FinePix 1400Z, FinePix 1700Z, FinePix 2200, FinePix 2400Z, FinePix 2500Z, FinePix 2700Z, FinePix 4500z, FinePix 4800z, FinePix 4900z, FinePix 50i, FinePix 500, FinePix 600z, FinePix 6800z, FinePix 6900z, FinePix 700, FinePix PR21, FinePix S1 Pro, FinePix S2 Pro, FinePix F601, FinePix F602, MX Series, FinePix 402 , FinePix F601 Zoom , MX-2700 , FinePix F402 , FinePix F30 , FinePix F440 , FinePix S5 Pro FinePix 2300, FinePix F810 Zoom, FinePix 1400 Zoom, FinePix 2400 Zoom, FinePix 2800 Zoom, FinePix 4800 Zoom, FinePix 4900 Zoom, FinePix 6800 Zoom, FinePix 6900 Zoom, FinePix F401 Zoom, FinePix F410, MX-1200, MX-1700 Zoom, MX-2900 Zoom, MX-500, MX-600 Zoom, MX-700, FinePix S602, FinePix 2800, FinePix 3800, FinePix F401, FinePix F650, FinePix S9000, FinePix S9500, FinePix S7000, FinePix S3000, FinePix S20 Pro, FinePix S304, FinePix S5100, FinePix S5500, FinePix S3100, FinePix S3500, FinePix S5200, FinePix S5600, FinePix V10, FinePix F31fd, FinePix F20, FinePix S5700, FinePix S5800, FinePix S8000fd, FinePix F40fd, FinePix F45fd, FinePix F47fd FinePix F440 Zoom, FinePix F460, FinePix S5000, FinePix S700
		KODAK	EasyShare LS755 , EasyShare DX6490 , EasyShare V530 , EasyShare V803 , EasyShare DC4800, EasyShare DX7440, EasyShare DX7590, EasyShare DX7630, EasyShare One Series, EasyShare LS443, EasyShare LS633, EasyShare LS743, EasyShare LS753, EasyShare M753, EasyShare M853, EasyShare M873, EasyShare M883, EasyShare P712, EasyShare P850, EasyShare P880, EasyShare V1003, EasyShare V550, EasyShare V570, EasyShare V603, EasyShare V610, EasyShare V705, EasyShare Z730, EasyShare Z7590, EasyShare Z760, EasyShare LS420
		KYOCERA	SAMURAI 2100DG, FineCam S3, Finecam SL300R , Finecam S5R , Finecam SL400R, Finecam S3R, Finecam S5, Finecam S4, Finecam S3L, Finecam S3x, Finecam M400R, Finecam M410R
		MINOLTA	Dimage X , Dimage X50 , Dimage X60, Dimage Xg, Dimage Xt, DIMAGE A1
		OLYMPUS	IR-300, IR-500, MR-100, MR-500i, SP-700
		PANASONIC	Lumix DMC-F7 , Lumix DMC-F1
		ROLLEI	PREGO dp4200 , DP8300 , Prego dp6200
		SANYO	DSC-MZ3
TOSHIBA	Allegretto M3, Allegretto M4, Allegretto M5, Allegretto M40, Allegretto M70, PDR-M4, PDR-M5, PDR-M6, PDR-M11, PDR-M25, PDR-M60, PDR-M61, PDR-M65, PDR-M70, PDR-M71, PDR-M81, PDR-M21		

For Game Player Portable


Image	Connector	BRAND	Fit Gamer Player Portable
	Z1/Z3	SONY	PlayStation Portable (PSP) , PSP-2006 , PSP-1000
	E1	PIONEER	GEX-INN01

UEB-3 Standard Adaptor Plugs


For PMP

Image	Connecter	BRAND	Fit PMP
	G1	IRIVER ARCHOS	PMP-120 AV500 Mobile DVR(100GB), Gmini 500 (100GB), AV5100 Mobile DVR
	Z1/Z3	ARCHOS EPSON CREATIVE	AV400, AV500 Mobile DVR (30GB) , AV420, Gmini 500 (30GB) P-2000, P-4000, P-2500, P-4500, P-5000, P-3000 ZEN VISION, PMC-HD0002, ZEN TOUCH, DAP-HD0014




For PDA

	G1	TOSHIBA	e800, e805, e830
--	----	---------	----------------------------------









For Mobile Phone

	E1	MOTOROLA NOKIA	C250, C300, C330, C332, C333, C336, C350, C359, C375, C380, C385, C390, C450, C550, C650, C651, E375, E380, V150, V180, V220, V2288, T180, T191, T192, T2288 N-Gage, E70, E60, 9500, 9300i, 9300, 9290, 9210i, 8910i, 8910, 8890, 8855, 8850, 8850 Gold, 8801, 8390, 8310, 8300, 8290, 8270, 8265, 8260G, 8260, 8250, 8210, 8200, 7710, 7700, 7650, 7610, 7600, 7280, 7270, 7260, 7250i, 7250, 7200, 6822, 6820i, 6820, 6810, 6800, 6682, 6681, 6680, 6670, 6651, 6650, 6630, 6620, 6610i, 6610, 6600, 6590i, 6590, 6585, 6560, 6510, 6500, 6390, 6385, 6370, 6360, 6310i, 6260, 6256i, 6255i, 6255, 6236i, 6235i, 6235, 6230i, 6230, 6225, 6220, 6200, 6170, 6108, 6062, 6061, 6060, 6060v, 6030, 6021, 6020, 6019i, 6016i, 6015i, 6015, 6012, 6010, 5510, 5210, 5140i, 5140, 5100, 3810, 3660, 3620, 3610, 3600, 3595, 3590, 3589i, 3588i, 3587i, 3586i, 3586, 3585i, 3585, 3570, 3560, 3530, 3520, 3510i, 3510, 3410, 3395, 3390, 3385, 3361, 3360, 3350, 3330, 3320, 3315, 3300, 3230, 3220, 3205i, 3205, 3200, 3125, 3120, 3110, 3108, 3105, 3100, 2652, 2651, 2650, 2610, 2600, 2300, 2285, 2280, 2275, 2270, 2260, 2255, 2128i, 2126i, 2125i, 2125, 2118, 2116i, 2116, 2115i, 2112, 2100, 1600, 1261, 1260, 1221, 1112, 1110i, 1110, 1101, 1100, 7380, 2355, 8280
--	----	-----------------------	---

For 6~7V devices

Image	Connecter	BRAND	Fit Camcorder or Digital Camera
	G1	SAMSUNG	DIGIMAX-350SE, DIGIMAX-410, DIGIMAX-340, DIGIMAX-230
	Z1/Z3	CASIO CONTAX KYOCERA MINOLTA NIKON SAMSUNG SANYO TOSHIBA	QV-2800UX, QV-3EX, QV-2000UX, QV-2300UX, QV-5000SX, QV-500SX, QV-70, QV-700, QV-7000, QV-7000SX, QV-770, QV-780, QV-8000SX, QV-2100, QV-2000UX/lr, QV-2900, QV-3000EX, QV-3500, QV-4000, QV-5500SX, QV-5700, QV-3000EX/lr, QV-3500EX, QV-2400UX, QV-2900UX, GV-20 DX010242 CONTAX N Digital, SAMURAI 1300DG Dimage S404, Dimage RD3000, RD-175+24-85MM, Dimage 2300, Dimage 2330Z, Dimage 3D1500, Dimage E201, Dimage EX 1500, Dimage S304, Dimage 5, Dimage 7, Dimage V, Dimage VX, Dimage 7Hi, Dimage S414, Dimage Z1, Dimage A1, Dimage A2, Dimage Z2, Dimage Z10, Dimage Z3, Dimage 2330, Dimage Z5, Dimage A200 COOLPIX 880 Digimax 330, Digimax 130, Digimax 210SE, Digimax 220SE Xacti DSC-R1, Xacti VPC-R1 PDA E570, PDA E550, Allegretto M1, Allegretto M60, PDR-M1
	E2	AGFA EPSON HP NIKON OLYMPUS PENTAX POLAROID KODAK RICOH VIVITAR	ePhoto 1280, ePhoto 1680, ePhoto 307, ePhoto 780, ePhoto 780c, ePhoto CL18, ePhoto CL20, ePhoto CL30, ePhoto CL30Click, ePhoto CL34, ePhoto CL50, ePhoto Smile PhotoPC 550, PhotoPC 600, PhotoPC 650, PhotoPC 700Z, PhotoPC 750Z, PhotoPC 800, PhotoPC 850Z, PhotoPC 900Z, PhotoPC 3000Z, PhotoPC3100Z, PC 80Z, PhotoPC 700 Photosmart 318, PhotoSmart C200/200xi, PhotoSmart C215, PhotoSmart C315, PhotoSmart C618, PhotoSmart C912, Photosmart 120, Photosmart 315, Photosmart 320, Photosmart 612, Photosmart 620, Photosmart 715, Photosmart 720, Photosmart 850, Photosmart 945, PhotoSmart C200CL COOLPIX 750, COOLPIX 775, COOLPIX 800, COOLPIX 880 , COOLPIX 900, COOLPIX 900S, COOLPIX 910, COOLPIX 950, COOLPIX 990, COOLPIX 995, COOLPIX 5000, COOLPIX 4500, COOLPIX 5400, COOLPIX 885, COOLPIX 880, COOLPIX 5700, COOLPIX 4300, COOLPIX 2000, COOLPIX 8700 C-120, C-1000L, C-1400L, C-1400XL, C-2000Z, C-2020Z, C-2040Z, C-2100UZ, C-2500L, C-3000Z, C-3020Z, C-3030Z, C-3040Z, C-400L, C-410L, C-420L, C-4040Z, C-700, C-700UZ, C-Z1, C-800L, C-820L, C-830L, C-840L, C-860L, C-900, C-900Z, C-920Z, C-960Z, C-990Z, E-10, E-20N, E-100RS, E-20P, C-750UZ, C-740UZ, C-730UZ, C-720UZ, C-5060WZ, C-5050Z, C-4000Z, C-300Z, C-200Z, C-100, C-920, C-400, E-20, D-620L, D-600L, D-550Z, D-510Z, D-500L, D-490Z, D-460Z, D-450Z, D-400Z, D-370, D-360L, D-340R, D-340L, D-320L, D-300L, D-220L, D-200L, C-8080WZ, C-7070WZ, C-3100Z, C-755UZ, C-745UZ, C-725UZ, C-990ZS EL-200, EL-2000 PDC-300, PDC-640, PDC-700, PDC-1100, PDC-2300Z, PDC-3000 DC-20, DC-25, DC-40, DC-50Z, DC-80, DC-120Z, DC-200, DC-200Plus, DC-210, DC-210Plus, DC-210AZ, DC-215Z, DC-220Z, DC-240Z, DC-240iZ, DC-260Z, DC-265, DC-265Z, DC-280Z, DC-280JZ, DC-290, DC-290Z, DC-3200, DC-3400Z, DC-5000Z, DCS-315 RDC-100G 2500, 2800, 3500, 8000

UEB-3 Standard Adaptor Plugs

Image	Connecter	BRAND	Fit PMP
	Z1/Z3	ARCHOS	AV700 Mobile DVR (40GB)
For 7.2-9V devices			
Image	Connecter	BRAND	Fit Camcorder or Digital Camera
	G1	JVC	GR-DV90 , GR-DVX6K
		PANASONIC	NV-VZ15
		CANON	IXY DV S1 , IXY DV M5 , Optura S1, DC10, DC20, DC40, DC100, DC22, iVIS DC22, MVX1Si, FVM300, Elura100, MVX430, HV10, DC21, DC19, DC95, MVX450, MVX460, MV960, MV950, MV940, MV930, MV920, MV900, MV890, DC210, DC220, DC230, DC50, DC211, DC201, HV20, iVIS DC200, HR10, DC51, Optura 10, ZR65MC
	G2	CANON	Power Shot G2, ZR45MC, ZR45MCA, DM-MV400i E , Optura 100MC, Optura 200MC, Optura Pi, PowerShot G1, PowerShot G3, PowerShot G5, PowerShot G6, PowerShot Pro 1, PowerShot Pro 90 IS, PowerShot S80, ZR10, ZR20, ZR25MC, ZR30MC, ZR40, ZR50MC, EOS D60
	G3	SAMSUNG	SCD23, SCD86, VP-D5000i , SC-D353NTSC , Pro 815 , SCD24, SCD87, SC-D5000, SCD27, SCD29, VP-D97i, VP-D21i, VP-D24i, VP-D26i, VP-D5000, VP-MX10 , SC-DX103/XAA
	E3	SONY	CCD-TRV118, CCD-TRV318, CCD-TRV47E, CCD-SC5, CCD-TR1, CCD-TR200, CCD-TR3, DCR-TRU47E, CCD-TR300, CCD-TR3000, CCD-TR500, CCD-TR517, CCD-TR910, CCD-TR940, CCD-TRV119, CCD-TRV615, CCD-TRV15, CCD-TRV16, CCD-TRV25, CCD-TRV3000, CCD-TRV36, DCR-TRV110E, DCR-PC110, CCD-TRV37Hi8, CCD-TRV4, CCD-TRV41, CCD-TRV43, CCD-TRV46, CCD-TRV51, CCD-TRV57Hi8, DCR-DVD100, DCR-DVD200, DCR-TRV19, DCR-PC120E, DCR-PC105K, DCR-PC9E, DCR-TRV22K, DCR-TRV22, DCR-TRV320, DCR-TRV33, DCR-TRV38, DCR-TRV70K, DCR-TRV33K, MVC-FD85, MVC-FD90, MVC-FD95, MVC-CD500, DCR-TRV310 , DSC-S75 , DCR-TRV8E , DCR-TRV10E , DCR-PC105E , CCD-TR311, CCD-TR413, CCD-TR414, CCD-TRV65, CD-TRV35, CCD-TRV215, CCD-TRV315, CCD-TRV87E, CCD-TRV67E, CCD-TRV57E, CCD-TR317, MVC-CD200, CCD-TRV65E, CCD-TRV3E, CCD-TRV15E, CCD-TRV23E, CCD-TRV35E, DCR-PC115E, DSC-F828, MVC-CD350, HVR-V1C, HVR-A1J, DSC-R1, DCR-DVD100E, DCR-DVD200E, DCR-PC103E, DCR-PC104E, CCD-TRV98, DCR-PC100, DCR-TRV17, DCR-TRV6, DCR-TRV140, CCD-TR516, DCR-TRV8, DCR-TRV510, DCR-TRV315, DCR-TRV230, DCR-TRV520, DCR-TRV330, CR-TRV38, DCR-TRV820, DCR-PC115, DCR-TRV130, CCD-TRV81, CCD-TR76, DCR-TRV10, DCR-VX2000, DCR-TRV120, DCR-TRV740, DCR-TRV240, DCR-TRV340, CCD-TRV308, DCR-TRV210, DCR-TRV27, DCR-TRV70, CCD-TRV68, DCR-TRV730, DCR-TRV830, CCD-TRV66, CCD-TRV87, CCD-TRV67, DCR-TRV110, CCD-TRV57, DCR-TRV20, DCR-TRV11, DCR-TRV900, CCD-TR716, DCR-TRV18, DCR-PC9, CCD-TRV108, DCR-TRV525, DCR-TRV30, CCD-TRV58, CCD-TRV88, DCR-TRV530, CCD-TR818, DCR-PC120BT, DCR-TRV460, CCD-TRV128, CCD-TRV328, DCR-DVD300, CCD-TRV338, DCR-TRV480, HDR-HC1, DCR-TR7000, DCR-TRV720, DCR-TRV50, DCR-DVD301, DCR-DVD101, DCR-TRV25, DCR-TRV80, DCR-TRV350, DCR-PC330, DCR-TRV39, DCR-PC105, DCR-TRV260, DCR-TRV250, DCR-TRV840, CCD-TRV608, DCR-TRV360, DCR-PC101, DCR-TRV950, DCR-DVD201, CCD-TRV138, HDR-FX7, DCR-TRV280, HDR-FX1, DCR-VX2100, HDR-SR1, HDR-UX1, CCD-TRV126, CCD-TRV116, HVR-V1J
	E1	SAMSUNG	SCD55 , SCL810, SCL860, SCM51 , 440X DIGITAL ZOOM
	Z1/Z3	CONTAX	I4R , DX010242
		JVC	GR-DVA10 , GR-DVX818EG-B
		CANON	DM-MV100E
		NIKON	COOLPIX 880
		PANASONIC	NV-DVA10 , NV-DA1EN
		SHARP	VL-H880 , VL-Z5 , VL-Z7
	E2	NIKON	COOLPIX 880
		PANASONIC	DMC-LC5 , DMC-FZ1 , NV-GS50 , PVDV53 , PVDV103 , PVDV203 , PVG5050S
		SHARP	VLZ3U